



# SERIES BS

## DIMENSIONS

### Worm gear with horizontal input shaft and feet

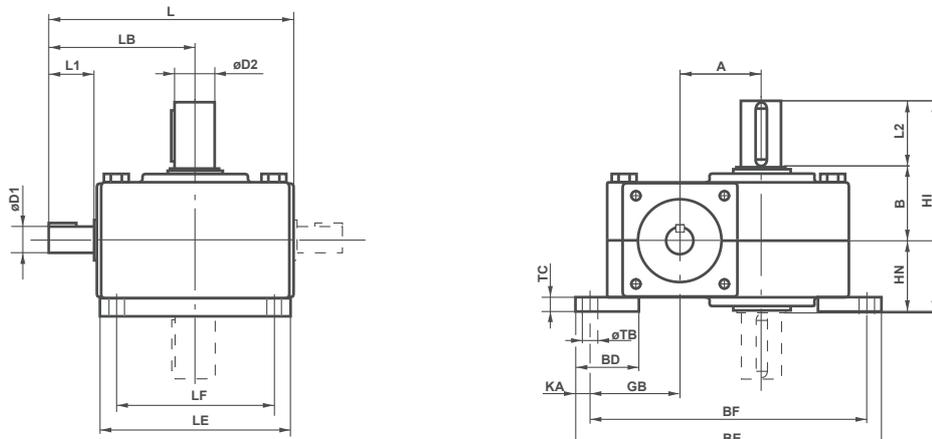

 
Mounting position HU, HN, HD. Also state position of input shaft



Mounting position HU-B

BS	A	B	BD	BE	BF	D1	D2	GB	HI	HN	KA	L	L1	L2	LB	LE	LF	TB	TC	X	Kgs
40	40	47	40	181	162	14	20	57	131.5	48.5	9.5	146	25	36	86	100	80	9	12	49	4.1
50	50	50	40	196	177	19	25	59	143	51	9.5	179	35	42	108	124	104	9	12	52	6.4
63	63	52	45	233	213	19	30	68	163	53	10	200.5	35	58	118.5	146	126	11	12	54	8.7
71	71	62.5	55	266	241	24	35	79	186.5	66	12.5	214	40	58	128	165	137	12.5	15	64.5	12.7

### Standard execution with motorflange

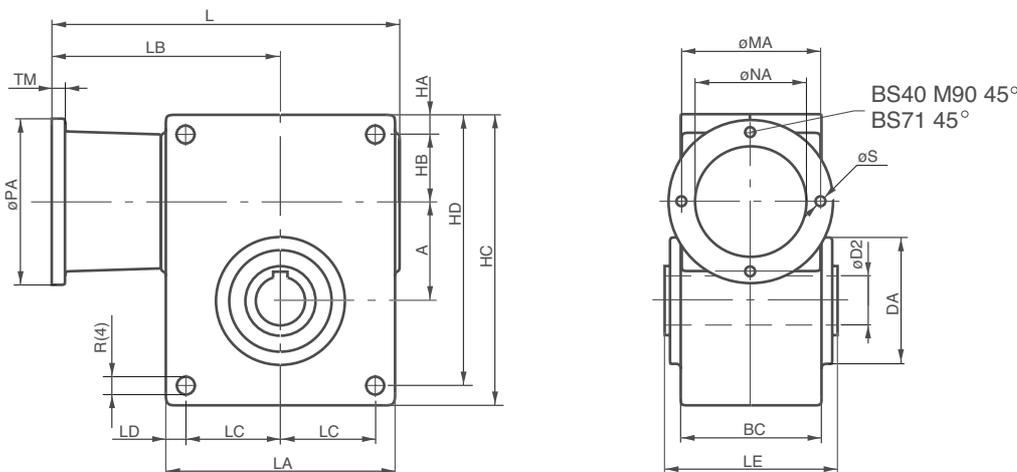

Mounting position O- or U-hollow shaft

Size Motor- Flange	size	type	A	BC	D2	DA	HA	HB	HC	HD	L	LA	LB	LC	LD	LE	MA	NA	PA	øR	S	TM	Kgs
40	63	B14								172		112				75	60	92		6	8	3.6	
	71	B14	40	73	20	58	10	36	140	130	178	100	118	40	10	92	85	70	102	8.3	7	9	3.6
	80	B14									188		128			100	80	118		7	10	3.6	
	90	B14									198		138			115	95	140		9	12	3.6	
50	71	B14									211		140			85	70	108		7	10	5.5	
	80	B14	50	78	25	68	10	38	155	145	221	124	150	52	10	98	100	80	118	8.3	7	10	5.7
	90	B14									231		160			115	95	140		9	12	5.9	
	71	B14									233		151			85	70	108		7	10	7.2	
63	80	B14	63	82	30	80	10	43	183	173	243	146	161	63	10	101	100	80	118	10.3	7	10	7.4
	90	B14									253		171			115	95	140		9	12	7.6	
	100	B14									263.5		181.5			130	110	160		9	12	7.8	
	80	B14									263		177			100	80	118		7	10	10.6	
71	90	B14	71	104.5	35	92	14	49	209	195	273	165	187	68.5	14	122	115	95	140	12.3	9	12	10.8
	100/112	B14									283.5		197.5			130	110	160		9	12	11.0	

Shaft tolerance, see page 57